



FINIUM

KONSEPT | VOHG & MOD WALL PANEL INSTALLATION INSTRUCTIONS

PRECAUTIONS



Always wear work gloves, safety glasses and mask when cutting this product.

TOOLS

- 100% polyurethane construction glue (3 tubes per 100 ft² or 10 m²)
- Caulking gun
- Electric mitre saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish nailer (#23 gauge finish nail)
- Stepladder

WALL PANEL NEEDS TO BE GLUED AND NAILED FOR A SUCCESSFUL INSTALLATION AND TO PREVENT FUTURE WARPING. FAILURE TO COMPLY WITH INSTALLATION INSTRUCTIONS SHALL VOID APPLICATION OF THE WARRANTY.

Do not install over material other than drywall or plywood.


MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN TOP CONDITION.

FIRST, check that wall is level from floor to ceiling and edge-to-edge. If not, adjust accordingly.


STEP 1: If you are using mouldings mark required space around the perimeter of installation area.

STEP 2:


Apply a line of 100% polyurethane glue (1/2" (1.3 cm) from the edge) and an X inside the rectangle on the back of the wall panel.

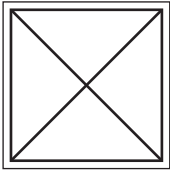

STEP 3: Position first panel at lower left of wall. Make sure the exposed backing are facing up and right. If using moldings, position in area designated in step 1.

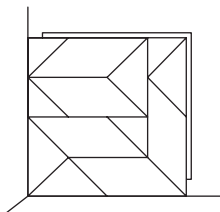


STEP 4: Nail panel in place with #23 gauge finish nails on the exposed backing and on the left and bottom at angles between wood slats. NEVER NAIL DIRECTLY ON FACE OF WALL PANEL.

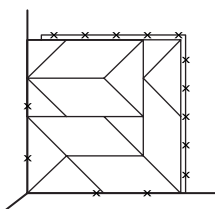

x = #23

STEP 5: Installation of subsequent panels

- Repeat Step 2.
- Align panel B against panel A.
- Repeat Step 4.

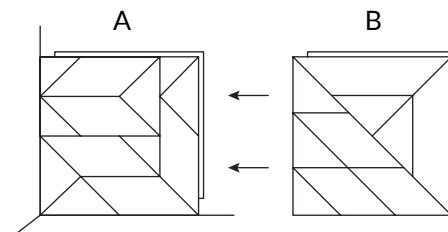

STEP 6: End row /Cut any excess of wall panel flush with edge of wall. If required, allow enough space for the moulding.

STEP 7: Last row /Cut panels of last row lengthwise to fit available space. If required, allow enough space for the moulding.

STEP 8: Insert moulding in previously designated area if required.

Finium guarantees the conformity of its products when they are installed according to installation instructions and maintained in an environment where ambient humidity ranges between 35% and 55%. Failure to comply with installation instructions shall void the application of the Warranty.

PRIOR TO INSTALLATION, PLACE CARTONS IN ORIGINAL PACKAGING FLAT ON THE FLOOR OF PLANNED ROOM.



finium.ca