

NOBLE | BRACE WALL PANEL INSTALLATION INSTRUCTIONS

PRECAUTIONS



Always wear work gloves, safety glasses and mask when cutting this product.

TOOLS

- 100% polyurethane construction glue (3 tubes per 100 ft² or 10 m²)
- Caulking gun
- Electric mitre saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish nailer (#23 gauge finish nail)
- Stepladder


WALL PANEL NEEDS TO BE GLUED AND NAILED FOR A SUCCESSFUL INSTALLATION AND TO PREVENT FUTURE WARPING. FAILURE TO COMPLY WITH INSTALLATION INSTRUCTIONS SHALL VOID APPLICATION OF THE WARRANTY.

Do not install over material other than drywall or plywood.

MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN TOP CONDITION.


FIRST, check that wall is level from floor to ceiling and edge-to-edge. If not, adjust accordingly.

STEP 1: Cut the protruding tabs.

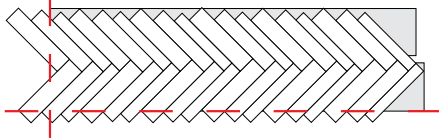


STEP 2:

A Apply a line of 100% polyurethane glue (1/2" (1.3 cm) from the edge) and an X inside the rectangle on the back of the wall panel.

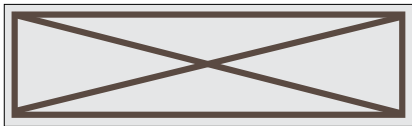


B Apply glue on the exposed backing at the edge.

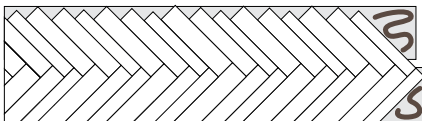


STEP 3:

Position first panel vertically at bottom right. Make sure each panel and each column is level.

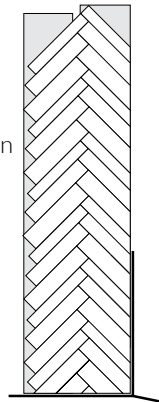

STEP 4:

Nail panel in place with #23 gauge nails on backing around the panel and on the right at angles between wood slats. NEVER NAIL DIRECTLY ON FACE OF WALL PANEL.

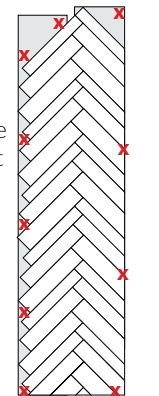

STEP 5: → Installation of next panels


- Repeat Step 2.
- Set panel **B** against **A**.
- Repeat Step 4.

STEP 6: End a column

Cut any excess of wall panel flush with top of wall.

STEP 7: Start a new column

Use remaining piece matching the pattern of previous column. Repeat Step 2 and apply glue on corresponding backing of adjacent wall panel.

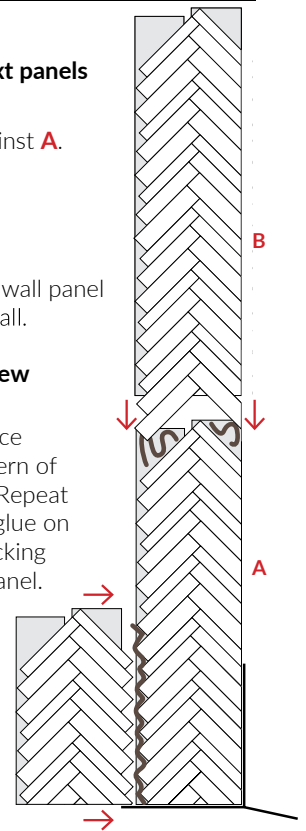

STEP 8: Last column

Cut panel on the left to fit available space.

NOTE: if wood pieces separate from a wall panel, reposition using 100% polyurethane glue.

Finium guarantees the conformity of its products when they are installed according to installation instructions and maintained in an environment where ambient humidity ranges between 35% and 55%: before, during and after installation.

PRIOR TO INSTALLATION, PLACE CARTONS IN ORIGINAL PACKAGING FLAT ON THE FLOOR OF PLANNED ROOM.

