

## PRECAUTIONS

Always wear work gloves and safety glasses when cutting product.



View our installation video before getting started:  
[www.finium.ca](http://www.finium.ca)

## TOOLS

- 100% polyurethane construction glue (3 tubes per 100 ft<sup>2</sup> or 10 m<sup>2</sup>)
- Caulking gun
- Electric mitre saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish nailer (#23 gauge finish nail)
- Stepladder

WALL PANEL NEEDS TO BE GLUED AND NAILED FOR A SUCCESSFUL INSTALLATION AND TO PREVENT FUTURE WARPING. FAILURE TO COMPLY WITH INSTALLATION INSTRUCTIONS SHALL VOID APPLICATION OF THE WARRANTY.


**Do not install over material other than drywall or plywood.**

## MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN TOP CONDITION.

**FIRST**, check that wall is level from floor to ceiling and edge-to-edge. If not, adjust accordingly.


**STEP 1:** If you are using mouldings, mark required space around the perimeter of installation area.

**STEP 2:** Cut a minimum of 6" (15 cm) from male side of panel to form your starting panel.

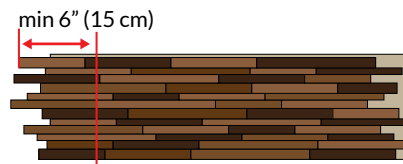

## STEP 3:


**A** Apply a line of 100% polyurethane glue (1/2" (1.3 cm) from the edge) and an X inside the rectangle.



**B** Apply glue on backing at edge.



**STEP 4:** Position first panel at lower left of wall. If using mouldings, position in area designated in Step 1.

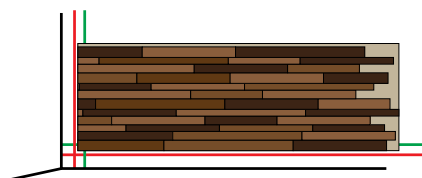


**STEP 5:** Nail panel in place with #23 gauge finish nails on backing around panel and at an angle in backing on two bottom rows between wood slats. NEVER NAIL DIRECTLY ON FACE OF NARROW WOOD SLATS.



## STEP 6: Installation of subsequent panels

- Repeat gluing procedure.
- Insert panel B into panel A.
- Repeat nailing procedure.

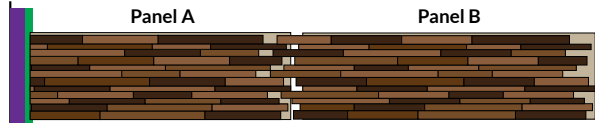

**STEP 7: End a row /** Cut any excess of wall panel flush with edge of wall.

**STEP 8: Start a new row /** Use remaining piece from previous row or repeat Step 2. Repeat Steps 3, 4 and 5.

**STEP 9: Last row /** Cut panels of last row lengthwise to fit available space. If required, allow enough space for the moulding.

**STEP 10:** Insert moulding in previously designated area if required.

**NOTE:** If wood pieces separate from a wall panel, reposition using 100% polyurethane glue.

Finium guarantees the conformity of its products when they are installed according to installation instructions and maintained in an environment where ambient humidity ranges between 35% and 55%: before, during and after installation.

**PRIOR TO INSTALLATION, PLACE CARTONS IN ORIGINAL PACKAGING FLAT ON THE FLOOR OF PLANNED ROOM.**

