

NOBLE | HAYLOFT WALL PANEL INSTALLATION INSTRUCTIONS

PRECAUTIONS

Always wear work gloves and safety glasses when cutting product.



Each box contains 4 wall panels and 16 wood slats

TOOLS

- 100% polyurethane construction glue (3 tubes per 100 ft² or 10 m²)
- Caulking gun
- Electric mitre saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish nailer (#23 gauge finish nail)
- Stepladder


WALL PANEL NEEDS TO BE GLUED AND NAILED FOR A SUCCESSFUL INSTALLATION AND TO PREVENT FUTURE WARPING. FAILURE TO COMPLY WITH INSTALLATION INSTRUCTIONS SHALL VOID APPLICATION OF THE WARRANTY.

Do not install over material other than drywall or plywood.


MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN TOP CONDITION.

FIRST, check that wall is level from floor to ceiling and edge-to-edge. If not, adjust accordingly.


STEP 1: Cut excess plywood on left side.

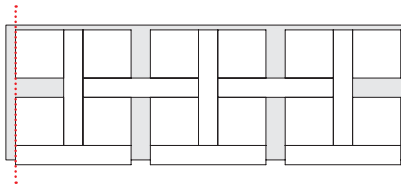


STEP 2: On back of panel, apply a line of 100% polyurethane glue 1/2" (1.3 cm) from all edges and forming an X in the centre.

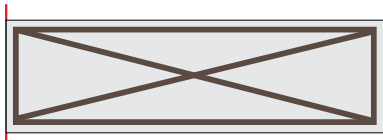

STEP 3: Starting from bottom left, place wall panel horizontally, cut side to the left. Make sure each wall panel and each row is level.

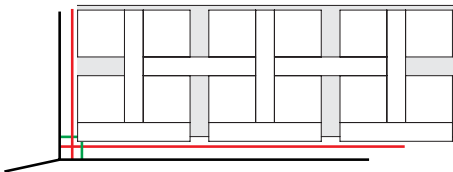


STEP 4: Nail the panel in place with #23 gauge finish nails in backing around the panel. NEVER NAIL DIRECTLY ON FACE OF WALL PANEL.

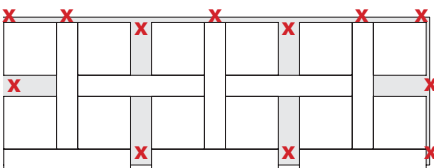

STEP 5: Installation of subsequent panels and wood slats

- A** Glue wood slat on right hand side of installed panel.
- B** To install next panel, repeat Step 2 and slide panel in position.
- C** Repeat Step 4.

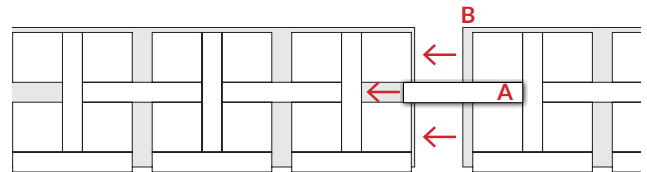

STEP 6: End a row

- At the end of a row, glue panel top wood slats in space provided.
- For panel bottom and both ends, wood slats must be cut then glued in position.

STEP 7: Start a new row

To start a new row, repeat Step 1 or use remaining pieces, matching the pattern of previous row.

STEP 8: Last row

Cut panels of last row lengthwise to fit available space.

NOTE: If wood pieces separate from wall panel, reposition using 100% polyurethane glue.

Finium guarantees the conformity of its products when they are installed according to installation instructions and maintained in an environment where ambient humidity ranges between 35% and 55%: before, during and after installation.

PRIOR TO INSTALLATION, PLACE CARTONS IN ORIGINAL PACKAGING FLAT ON THE FLOOR OF PLANNED ROOM.

