

# NOBLE | HAYLOFT WALL PANEL INSTALLATION INSTRUCTIONS

## PRECAUTIONS



Always wear work gloves, safety glasses and mask when cutting this product.

## TOOLS

- 100% polyurethane construction glue (3 tubes per 100 ft<sup>2</sup> or 10 m<sup>2</sup>)
- Caulking gun
- Electric mitre saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish nailer (#23 gauge finish nail)
- Stepladder


WALL PANEL NEEDS TO BE GLUED AND NAILED FOR A SUCCESSFUL INSTALLATION AND TO PREVENT FUTURE WARPING. FAILURE TO COMPLY WITH INSTALLATION INSTRUCTIONS SHALL VOID APPLICATION OF THE WARRANTY.

**Do not install over material other than drywall or plywood.**


**MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN TOP CONDITION.**

**FIRST**, check that wall is level from floor to ceiling and edge-to-edge. If not, adjust accordingly.


**STEP 1:** Cut excess plywood on left side.

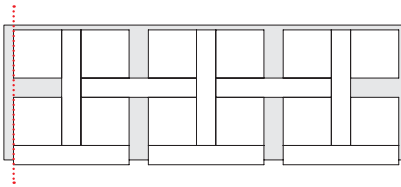


**STEP 2:** Apply a line of 100% polyurethane glue (1/2" (1.3 cm) from the edge) and an X inside the rectangle on the back of the wall panel.

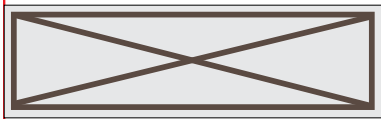

**STEP 3:** Starting from bottom left, place wall panel horizontally, cut side to the left. Make sure each wall panel and each row is level.

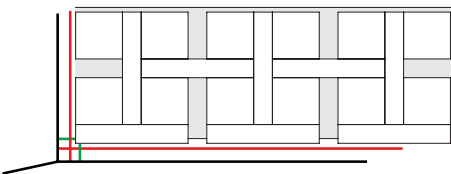


**STEP 4:** Nail the panel in place with #23 gauge finish nails in backing around the panel. NEVER NAIL DIRECTLY ON FACE OF WALL PANEL.

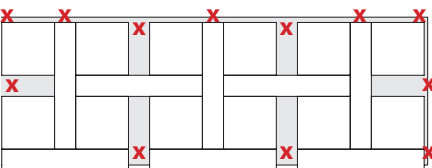

**STEP 5:** Installation of subsequent panels and wood slats

- A** Glue wood slat on right hand side of installed panel.
- B** To install next panel, repeat Step 2 and slide panel in position.
- C** Repeat Step 4.

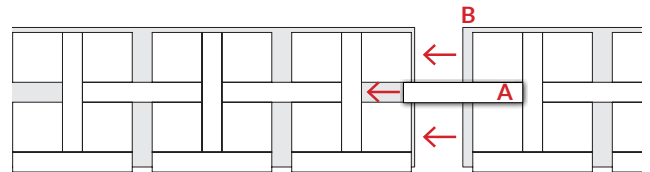

**STEP 6:** End a row

- At the end of a row, glue panel top wood slats in space provided.
- For panel bottom and both ends, wood slats must be cut then glued in position.

**STEP 7:** Start a new row

To start a new row, repeat Step 1 or use remaining pieces, matching the pattern of previous row.

**STEP 8:** Last row

Cut panels of last row lengthwise to fit available space.

**NOTE:** If wood pieces separate from wall panel, reposition using 100% polyurethane glue.

Finium guarantees the conformity of its products when they are installed according to installation instructions and maintained in an environment where ambient humidity ranges between 35% and 55%: before, during and after installation.

**PRIOR TO INSTALLATION, PLACE CARTONS IN ORIGINAL PACKAGING FLAT ON THE FLOOR OF PLANNED ROOM.**

