

# ACOUSTIK / OKTAV WALL PANEL INSTALLATION INSTRUCTIONS

## PRECAUTIONS



This products contains stone wool.  
Use goggles, gloves, mask and long sleeves for protection.

## TOOLS

- 100% polyurethane construction glue (3 tubes per 100 ft<sup>2</sup> or 10 m<sup>2</sup>)
- Caulking gun
- Electric miter saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish nailer (#23 gauge finish nail)
- Stepladder

WALL PANEL NEEDS TO BE GLUED AND NAILED FOR A SUCCESSFUL INSTALLATION AND TO PREVENT FUTURE WARPING. FAILURE TO COMPLY WITH INSTALLATION INSTRUCTIONS SHALL VOID APPLICATION OF THE WARRANTY.


**Do not install over material other than drywall or plywood.**

## MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN TOP CONDITION.

**FIRST**, check that wall is level from floor to ceiling and edge-to-edge. If not, adjust accordingly.

**STEP 1:** If you are using moldings, mark required space around the perimeter of installation area.

**STEP 2:** Cut the wood protruding from the wall panel on the left and bottom.

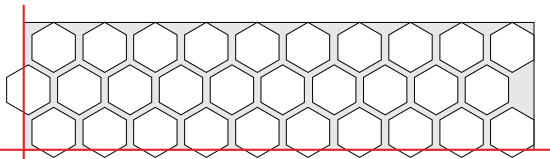


## STEP 3:

On the back of the wall panel, apply a line of 100% polyurethane glue on the edges and between the rectangles on the MDF frame and X's in the 3 rectangles.



**STEP 4:** Position first panel at lower left of wall.

**STEP 5:** Nail panel in place with #23 gauge finish nails in the MDF frames on the edges

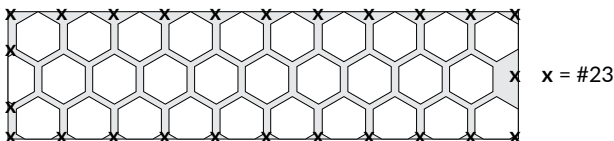

\*Nailing in the membrane will damage the wall panel.  
Be careful to nail in the MDF frame only.

## CEILING APPLICATIONS :


Special glues must be specified by the onsite engineer or architect with the use of #18 Gauge nails and installed by a licensed contractor or carpenter.

Structural weight limitations need to be considered.

*Ceiling applications are not covered by this warranty.*

## STEP 6: Installation of subsequent panels

- For the first row only : cut the protruding wood at the bottom of the wall panel.
- Repeat Step 3.
- Insert panel B into panel A.
- Repeat Step 5.

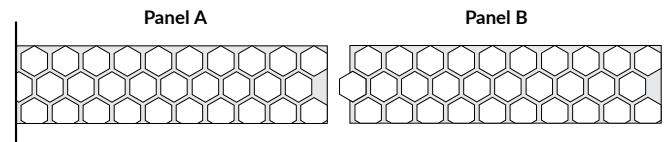

**STEP 7: End a row /**Cut any excess of wall panel flush with edge of wall.

**STEP 8: Start a new row /**Use remaining piece from previous row and cut to fit or repeat Step 2. Repeat Steps 3, 4 and 5.

**STEP 9: Last row /**Cut panels of last row lengthwise to fit available space.

**STEP 10:** Insert moulding in previously designated area if required.

**\* Handle with care when making cuts to the wall panel so as not to damage the membrane on the surface.**

**NOTE:** If wood pieces separate from a wall panel, reposition using 100% polyurethane glue.

Finium guarantees the conformity of its products when they are installed according to installation instructions and maintained in an environment where ambient humidity ranges between 35% and 55%: before, during and after installation.

**PRIOR TO INSTALLATION, PLACE CARTONS IN ORIGINAL PACKAGING FLAT ON THE FLOOR OF PLANNED ROOM.**

