

# DEZIGN / HEXO WALL PANEL INSTALLATION INSTRUCTIONS

## PRECAUTIONS



Always wear work gloves, safety glasses and mask when cutting this product.

## TOOLS

- 100% polyurethane construction glue (3 tubes per 100 ft<sup>2</sup> or 10 m<sup>2</sup>)
- Caulking gun
- Electric mitre saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish nailer (#23 gauge finish nail)
- Stepladder


WALL PANEL NEEDS TO BE GLUED AND NAILED FOR A SUCCESSFUL INSTALLATION AND TO PREVENT FUTURE WARPING. FAILURE TO COMPLY WITH INSTALLATION INSTRUCTIONS SHALL VOID APPLICATION OF THE WARRANTY.

**Do not install over material other than drywall or plywood.**

**MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN TOP CONDITION.**


**FIRST**, check that wall is level from floor to ceiling and edge-to-edge. If not, adjust accordingly.

**STEP 1:** Cut the wood protruding from the wall panel on the left and bottom.

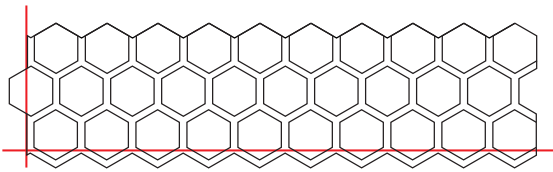


## STEP 2:

Apply a line of 100% polyurethane glue (1/2" (1.3 cm) from the edge) and an X inside the rectangle on the back of the wall panel.



**STEP 3:** Position first panel at lower left of wall.

**STEP 4:** Nail panel in place with #23 gauge finish nails.

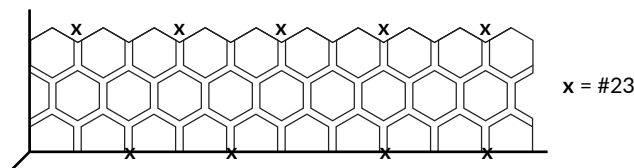


Nail at the base of the tabs at an angle to prevent the nails from showing.



## STEP 5: Installation of subsequent panels

- For the first row only : cut the protruding wood at the bottom of the wall panel.
- Repeat Step 2.
- Insert panel B into panel A.
- Repeat Step 4.

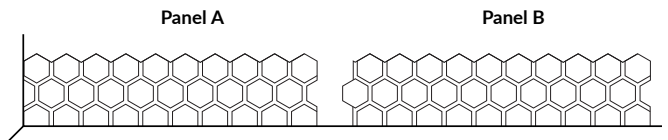

**STEP 6: End a row /**Cut any excess of wall panel flush with edge of wall.

**STEP 7: Start a new row /**Use a new piece and cut the protruding wood on the left making sure the pattern aligns with the bottom row. Repeat Step 2 and 4.

**STEP 8: Last row /**Cut panels of last row lengthwise to fit available space.

Finium guarantees the conformity of its products when they are installed according to installation instructions and maintained in an environment where ambient humidity ranges between 35% and 55%: before, during and after installation.

**PRIOR TO INSTALLATION, PLACE CARTONS IN ORIGINAL PACKAGING FLAT ON THE FLOOR OF PLANNED ROOM.**

